


SERVICE INSTRUCTIONS

GREASE FILLER PUMP

For 25 – 50 lb/ 5 gal. pails

Description

Grease Filler Pump is an ideal grease filling Solution to easily load bulk or combination grease guns from bulk grease containers.

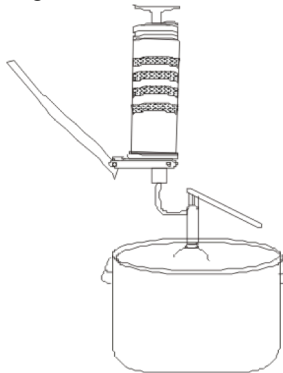

Delivery : Approx.400 gm(14 oz) per 15 strokes
The pump comes complete with a female loader fitting (Filler Adapter)to adapt to the loader valve fitted on grease guns, 12" dia. Drum Cover and 11" dia. Steel Follower Plate.

Assembly

1. Pull the plunger rod up and attach the lever handle to the plunger rod using the pivot pin and retainer clip
2. Insert the pump assembly through the flange fitted on the drum cover. **Note :** Do not tighten the nut & screw to clamp the tube assembly with drum cover.
3. Insert the follower plate in the grease container. Push down firmly onto the grease until grease emerges through the rubber grommet. (Fig 1)
4. Insert the pump tube assembly along with the drum cover through the rubber grommet of follower plate, till the pump tube touches the base of the container. (Fig 2)
5. Adjust the drum cover on the pump tube assembly to ensure it seats firmly on to the rim of grease container.
6. Hand tighten the 3 thumb screws evenly on the drum Cover assembly to fix the drum cover firmly on the grease container
7. Tighten the nut & screw on the flange of the drum cover to hold the tube assembly firmly in place
8. Screw the grease bend pipe and filler adapter assembly on to the outlet at the pump head.

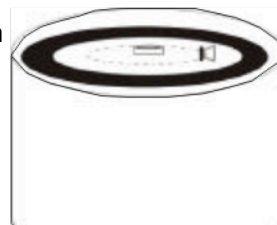


Fig 1



Fig 2

9. Pour approx 30ml of oil (SAE 30) into the pump outlet & start operating the lever handle. In a few strokes, pump will start dispensing grease.

Warning : Do not use steel follower plate when using the pump with tapered grease containers. (Only use rubber follower plate with tapered containers)

